

Air Power Systems Co., Inc. 8178 E. 44 th St. Tulsa, OK 74145 (918) 622-5600 FAX: (918) 622-5469 Web: www.apscopower.com	APSCO V-5-B Installation Instructions	Rev.:)E, 06/21/18 Approved By: Ryan Tietz II #: <u>II-151</u> Page 1 of 1
---	--	---

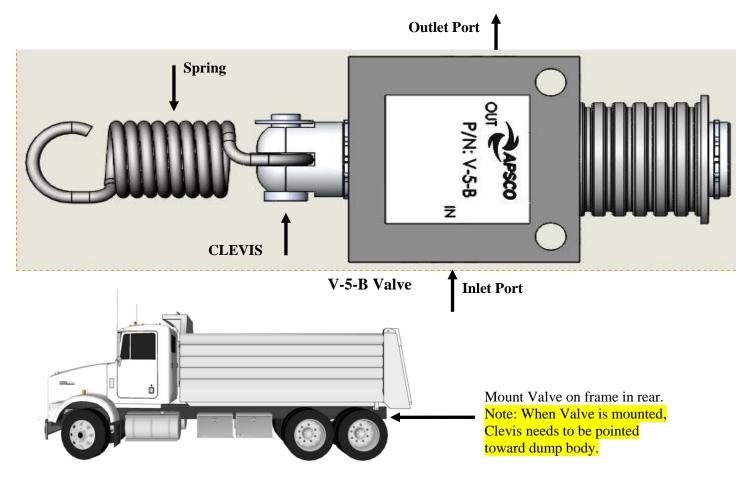


Installation:

- 1. Install air line from the "RAISE/TIP" Port of the Cab Control to the Inlet Port of the V-5-B. Run the Outlet Port air line from the V-5-B Outlet Port to the "RAISE/TIP" Port on the Air Cylinder on the Dump Pump. Note: Apply thread sealant to all fittings.
- 2. Raise Dump Body to desired height.
- 3. Tie cable to Spring and Dump Body. Note: Insure that V-5-B Spring is in its relaxed position (ie there is no tension on Spring).

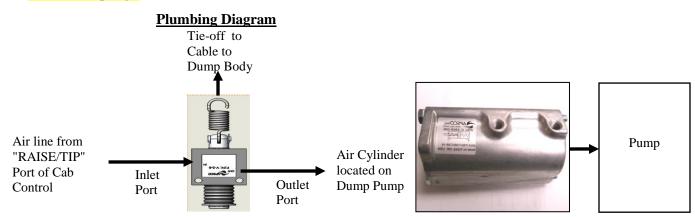

S:\Installation Instructions\V-5-B Installation Instructions (II-151)E.pdf

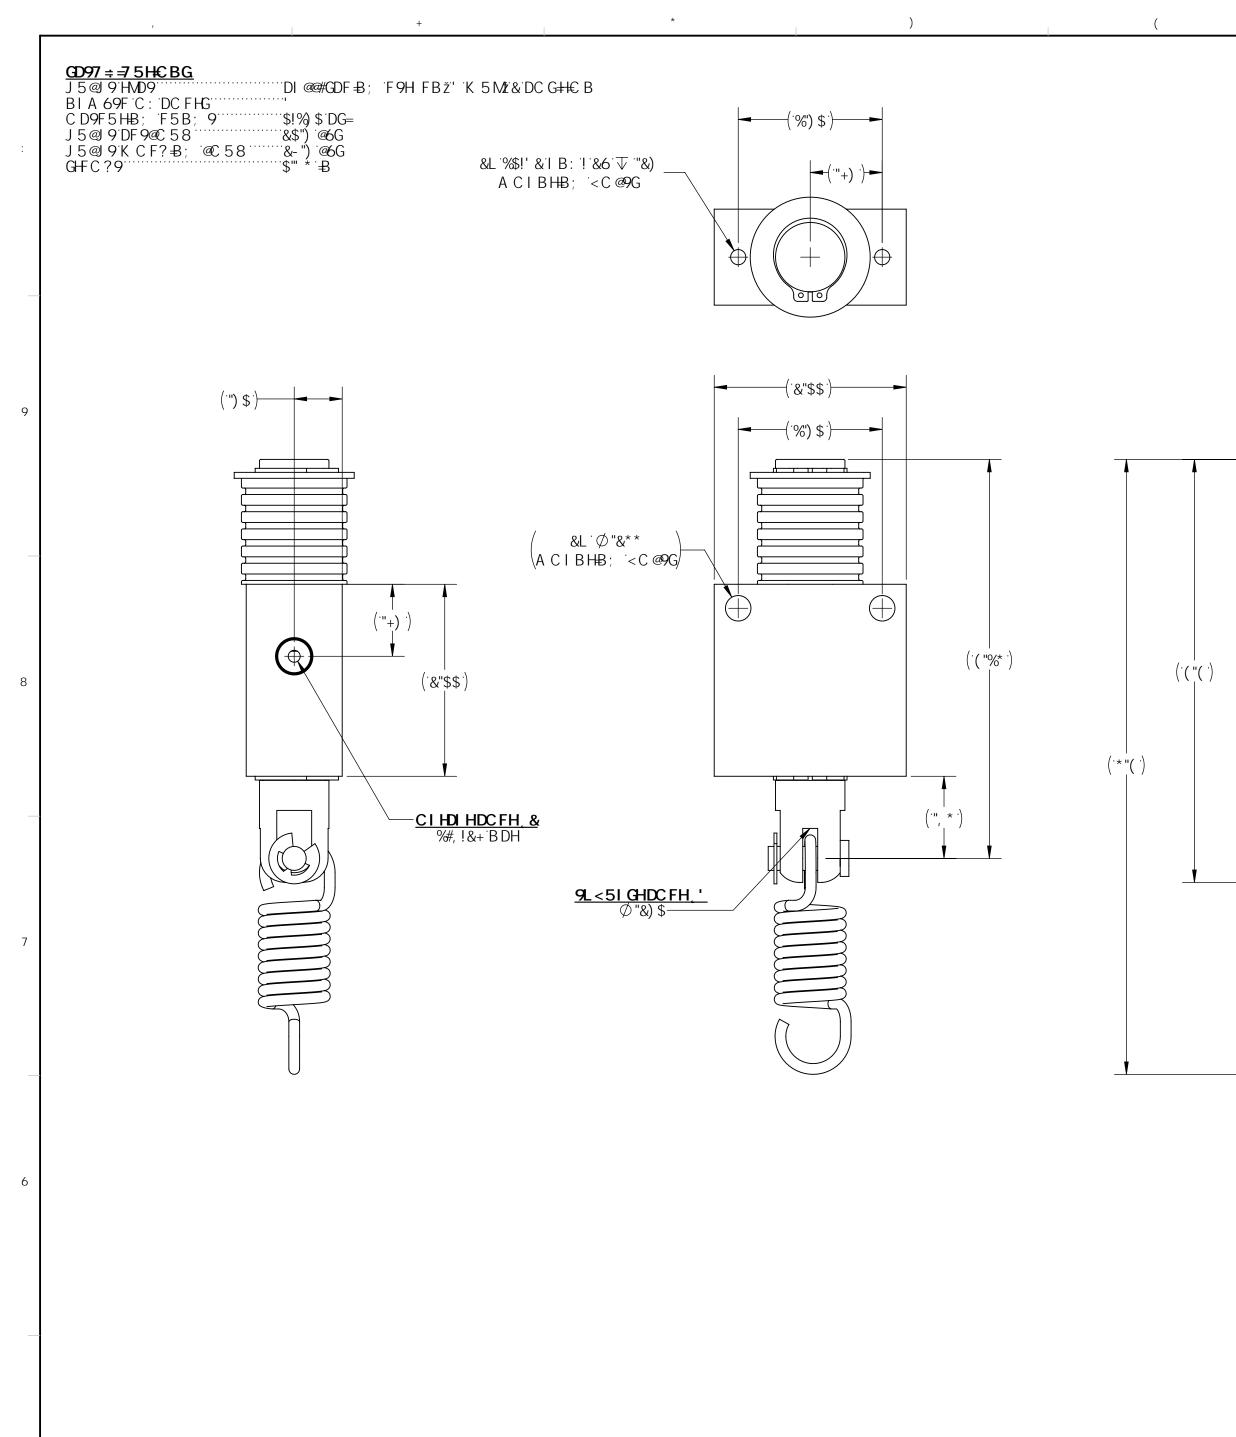

*

)

+

5

1

				 F9J -€€C BG	<u> </u>	70	
	97 F	F9J £€ B		8 9G7 F ÐH€ B	7 <5B; 98.6M	85H9	5 DDF C J 98 '6M
'	' * +&	9	588980	CDH€ B5@++&-!CF	76	%/#%(#&\$%	FH
		\$/ (`%')	6" \$%9LH9B898) 5- (F9HF57H98) 5-) 3 DD&MDCFH_% %#, !&+`BDH	to the second se			
	J						

&

%

(

&

%

.